
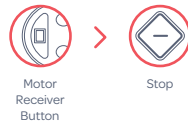


Radio Programming Instructions

bargain
blinds and curtains

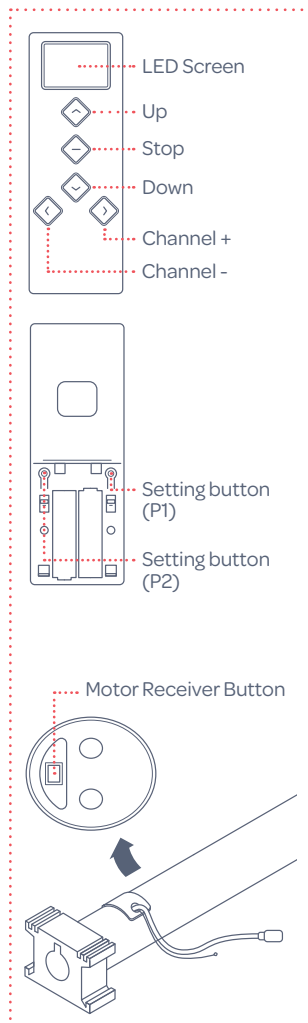

Step 1 Frequency Connection:

Press motor receiver button for 2 seconds, motor will vibrate once. Then press stop button for 2 seconds, motor will vibrate twice.



Step 2 Set Upper Limit:

Press up button + stop button for 2 seconds, motor will vibrate twice.



Step 3 Set Bottom Limit:

Press down button + stop button for 2 seconds, motor will vibrate twice.



Step 4 Remove Upper Limit:

Press up button + stop button for 5 seconds, motor will vibrate once.



Step 5 Remove Bottom Limit:

Press down button + stop button for 5 seconds, motor will vibrate once.



Step 6 Set / Remove Favorite Position:

1. Press P2 button, motor will vibrate once.
2. Press STOP button, motor will vibrate once.
3. Press STOP button.


Motor vibrates twice > Set Favorite Position.

Motor vibrates once > Remove Favorite Position.




Step 7 Switch Jog & continued operation:

1. Press up button + down button for 5 seconds, motor will vibrate once.
2. Press stop button, motor will vibrate twice.

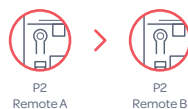

Step 8 Add a Remote Control:

1. Press remote (A) P2 button, motor will vibrate once.
2. Press remote (A) P2 button, motor will vibrate once.
3. Press remote (B) P2 button, motor will vibrate twice.

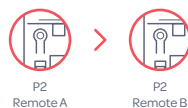

Step 9 Remove a remote control:

1. Press remote (A) P2 button, motor will vibrate once.
2. Press remote (A) P2 button, motor will vibrate once.
3. Press remote (B) P2 button, motor will vibrate twice.



Step 10 Max channels setting:

1. Press and hold Channel + and Channel - for 3 seconds.
2. Use Channel + and Channel - select to max channel (1-15).
3. Press STOP button to set max channels.



Step 11 Lock / Unlock Combination Button:

1. Press STOP 15 seconds.
2. Press P2 once, Lock (LED Flashes slowly for 3 seconds).
Unlock (LED Flashes quickly for 3 seconds).

Note:

The emitter should not be exposed to moisture or subjected to heavy impact, as this may affect its lifespan. If the emitter becomes unresponsive or the signal range decreases, please replace the battery. Use only a 3V AAA battery to avoid safety risks.