


Caring for lithium battery motorised roller blinds



To extend the life of your blind's lithium battery and motor, never let the battery go completely dead. Charge your battery as soon as it tells you to or EVERY 6 MONTHS, whichever comes first.

If you have a rechargeable remote control (look for a USB C port on the side of the remote), charge this every 6 months as well.

TIP: Use the start and end of daylight savings as a reminder to charge your blinds.

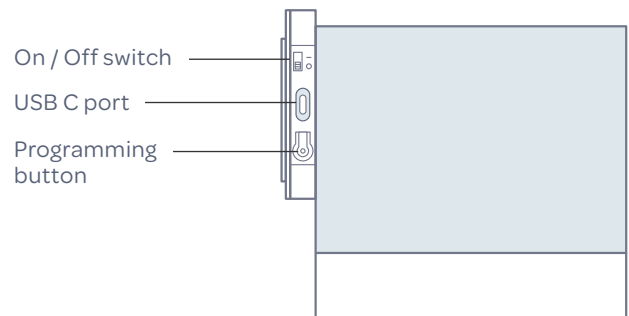


Your blinds may require more frequent charging, depending on how often they are used. When the battery is getting low:

- The red light behind the programming button will flash
- The blind will stutter when it starts to move up or down

If you notice either of these issues, charge your blinds BEFORE running them again to avoid damaging the battery.

If the motor won't be in use for more than 2 months, store it at roughly half a charge and turn the motor off by flipping the switch on the head of the motor to the **O** position. Turn it back on by flipping back to the **I** position.

It is also good practice to turn a motor off when programming another motor to reduce the risk of accidentally programming the wrong blind.

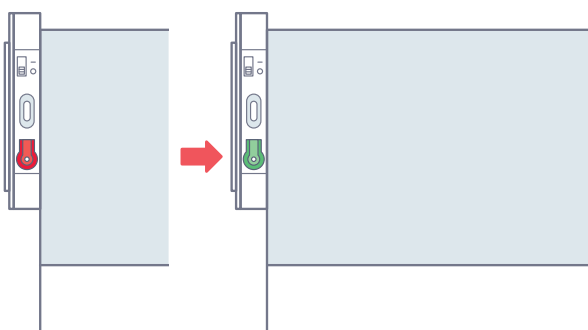

Charging can take up to 7 hours. You'll know it's fully charged when the light on the programming button turns from RED to GREEN.

Programming instructions

Be sure to keep the detailed programming instructions that came with your blinds in case you want to:

- Adjust the top or bottom limit of your blind
- Change the channel a blind is operating on
- Change the direction the blind is running in
- Hide or show more channels