



Motorised Roman Blinds Instructions

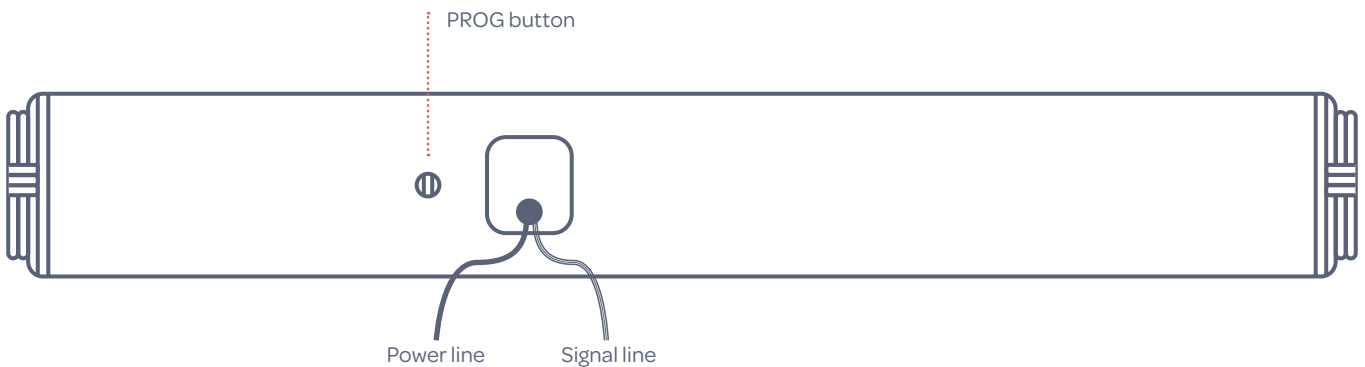

Roman blind motor



Remote control

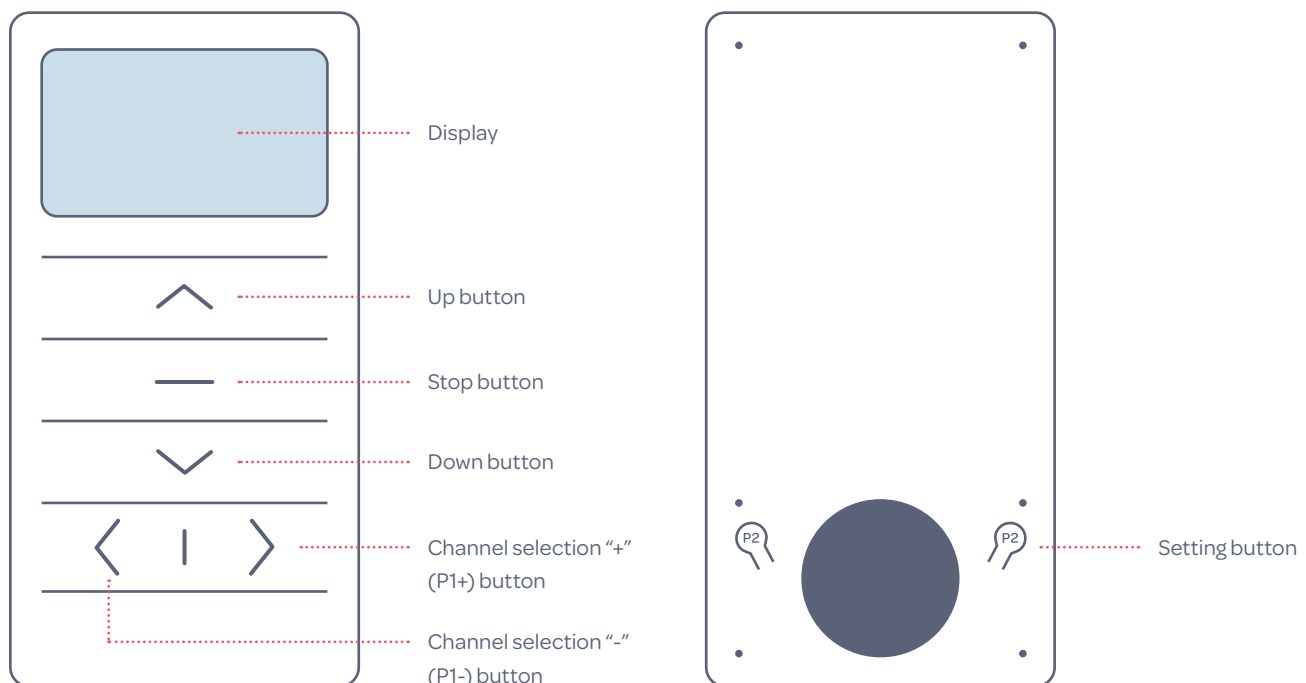

Important

1. Charge battery fully before use.
2. If you hear the "low voltage" alarm, please stop operating the blind and charge the battery.

Notes: When pairing, setting or adjusting the Roman Blind, the motor signals each step with a "Confirmation Movement". The "Confirmation Movement" (or "Confirm. Movement") is a quick up-and-down movement of roughly 20mm.

1. Pairing the remote and motor

1. Select the desired channel on the remote control.
2. Using a pen or something similar, gently press (no real force is required) and hold the programming button on the underside of the motor until the motor confirms with 1x Confirmation Movement (The motor will briefly run back and forward (i.e. up and down)).
3. Within 5 seconds press and hold the "Stop" button on the remote control until the motor confirms with 2x Confirmation Movements.

The motor is now paired to the remote control (on the channel selected in step 1.).

Note: In addition to the selected individual channel, channel "O" will operate all motors within range of the remote control in unison (all motors will run at the same time). It is important to individually set up each motor first though.




2. Limit position setting

Setting the top limit.

1. Press and hold "Up" button for one second until the blind moves upwards.
2. Using the "Up" and "Down" button on the remote control, run the blind to the desired top (stack) position.
3. Once desired top position is reached, press and hold the "Up" and "Stop" buttons together until the motor confirms with 2x Confirmation Movements.


The top limit is now set.

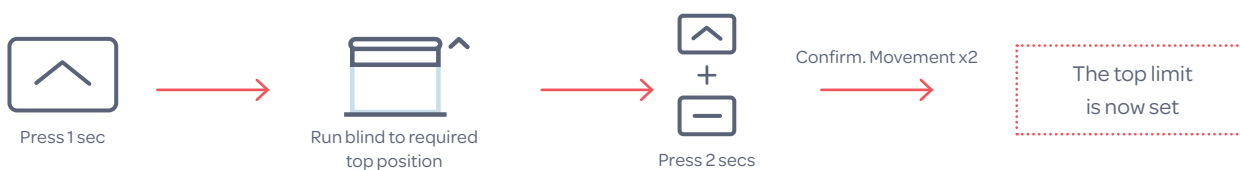

Setting the bottom limit.

1. Press and hold "Down" button for one second until the blind moves downwards.
2. Using the "Down" and "Up" buttons on the remote control, run the blind to the desired bottom position.
3. Once desired bottom position is reached, press and hold the "Down" and "Stop" buttons together until the motor confirms with 2x Confirmation Movements.

The bottom limit is now set.

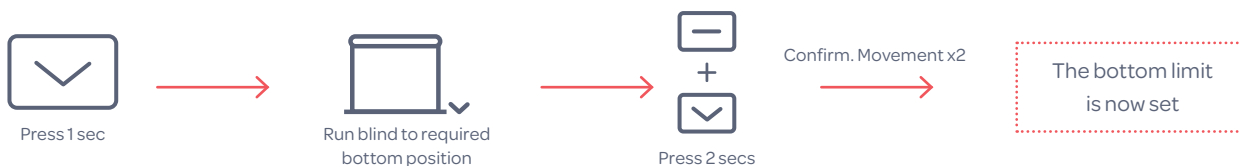

Note: Limits can only be set when the motor is in "setting mode". If you click the "Up" or "Down" buttons on the remote control and the blind only "Jogs" briefly in either direction, it is in "setting mode". If you click the "Up" or "Down" buttons on the remote control and the blind runs continuously it is in "operation mode". Once the limits have been set the blind will automatically enter "Operation Mode". In "Operation Mode", you only need to click the "Up" or "Down" button once and the blind will run continuously to the selected Top or Bottom position. The Top and Bottom limits cannot be in the same position.

3. Setting mode/operation mode (If you need to re-set your limits)

1. Press and hold the "Up" and "Down" buttons on the remote control together for 5 seconds until the motor confirms with 1x Confirmation Movement.
2. Within 5 seconds press and hold the "Stop" button on the remote control.
If the motor confirms with 1x Confirmation Movement, the motor is in "Setting Mode".
If the motor confirms with 2x Confirmation Movements, the motor is in "Operation Mode".
To swap between "Setting Mode" and "Operation Mode", simply repeat steps 1 and 2.

Note: When the blind is in "Setting Mode", if you click "Up" or "Down", the blind will only jog briefly in that direction.
If you **click and hold** "Up" or "Down" for 2 seconds, the blind will run continuously in that direction until the "Stop" button is pressed.



4. Fine-tuning the top/bottom limit position (If needed)

Fine-tuning the top limit (If needed)

1. Press and hold the "Up" and "Stop" buttons together for 5 seconds until the motor confirms with 1x Confirmation Movement (This enters the blind into "Setting Mode").
2. Using the "Up" and "Down" button on the remote control, run the blind to the fine-tuned top (stack) position.
3. Once desired top position is reached, press and hold the "Up" and "Stop" buttons together for 2 seconds until the motor confirms with 2x Confirmation Movements.

The Top Limit is now fine-tuned.



Fine-tuning the bottom limit (If needed)

1. Press and hold the "Down" and "Stop" buttons together for 5 seconds until the motor confirms with 1x Confirmation Movement (This enters the blind into "Setting Mode").
2. Using the "Up" and "Down" button on the remote control, run the blind to the fine-tuned Bottom position.
3. Once desired Bottom position is reached, press and hold the "Down" and "Stop" buttons together for 2 seconds until the motor confirms with 2x Confirmation Movements.

The Bottom Limit is now fine-tuned.



5. Adjusting speed

The motor has 3 speeds. 34rpm, 40rpm and 50rpm.

Note: The factory default is 40rpm.

To increase speed


1. Press and hold the "P2" button on the back of the remote control (beside the battery) for 1 second until the motor confirms with 1x Confirmation Movement.
2. Press "Up" on the remote control for 1 second until the motor confirms with 1x Confirmation Movement.
3. Press "Up" on the remote control again for 1 second until the motor confirms with 2x Confirmation Movements.

Note: If the motor does not run to confirm twice in step 3, the motor is already at its fastest speed.

To decrease speed

1. Press and hold the "P2" button on the back of the remote control (beside the battery) for 1 second until the motor confirms with 1x Confirmation Movement.
2. Press "Down" on the remote control for 1 second until the motor confirms with 1x Confirmation Movement.
3. Press "Down" on the remote control again for 1 second until the motor confirms with 2x Confirmation Movements.

Note: If the motor does not run to confirm twice in step 3, the motor is already at its slowest speed.

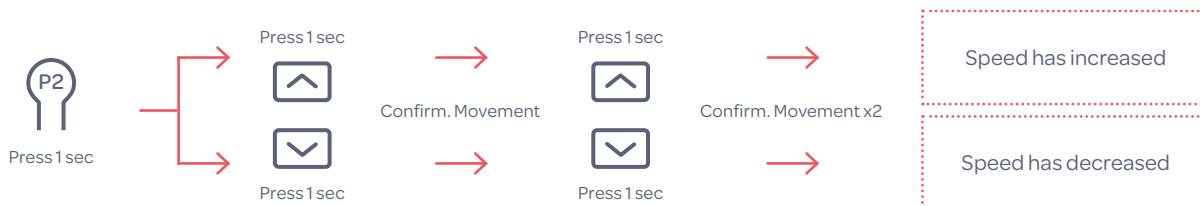


6. Preferred stop position setting

For setting a Preferred Stop Position that is not the Top or Bottom limit

1. Run the Blind to your Preferred Stop Position (press the Stop Button to stop the blind when you reach your Preferred Stop Position).
2. Press and hold the "P2" button on the back of the remote control (beside the battery) for 1 second until the motor confirms with 1x Confirmation Movement.
3. Press "Stop" on the remote control for 1 second until the motor confirms with 1x Confirmation Movement.
4. Press "Stop" on the remote control again for 1 second until the motor confirms with 2x Confirmation Movements.

Your Preferred Stop Position is now set.

Note: To delete the Preferred Stop Position simply repeat this operation.

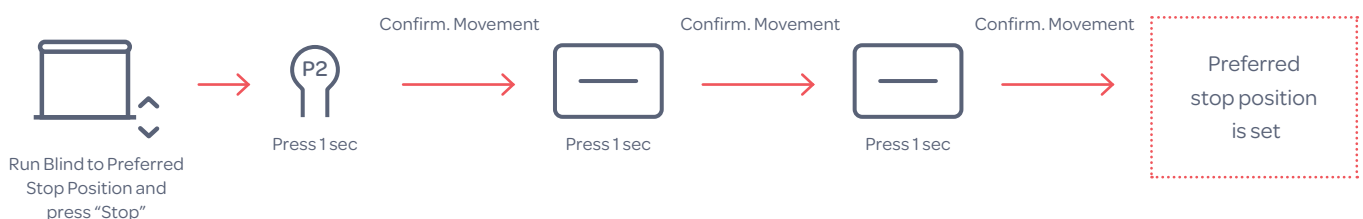

To run your blind to the set Preferred Stop Position, simply press and hold the "Stop" button for 2 seconds. The blind will then run to your set Preferred Stop Position from whatever position it was in.


7. Factory reset

Important - Please read!

Performing a Factory Reset will delete all previously set limits and unpair the remote from the motor.

Once a Factory Reset has been performed, you will need to follow the steps to pair a remote control and set the limits again. Factory Reset may also change the operation speed of the motor. If this happens, simply follow the "Adjusting Speed" steps until your desired speed is reached.

1. Using a pen or something similar, gently press (no real force is required) and hold the programming button on the underside of the motor until the motor confirms with 4x Confirmation Movements (about 14 seconds).

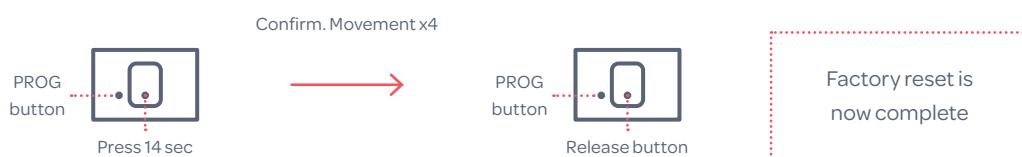

8. Switch direction (Optional)

Use this option if after you have paired the Remote Control and Motor, if the blind is operating in the opposite direction to the button you are pressing (i.e. you are pressing the "Up" button and the blind moves downwards).

Option 1:

Reset the limits following the "Limit Position Settings" instructions in section 2, but instead of stopping the blind when it reaches the bottom position, leave it running until the blind begins to travel upwards again.

The blind should now be operating in the correct direction. Set the limits as normal.

(This technique will only work if the drum holder cords have been cut and tied off correctly at the blinds (fully extended) bottom position).

Option 2:

After performing a "Factory Reset" and pairing the Remote Control and motor together (but before you set the Top or Bottom limits) follow these steps...

1. Click the "Up" button for 1 second (The blind will move downward).
2. Press and hold the "Up" and "Down" buttons together for 2 seconds, until the motor confirms with 1x Confirmation Movement.

The blind should now have switched direction (i.e. Pressing "Up" should now make the blind travel upwards).



1 year Limited Warranty on all Hardware Components and Electronics (from date of purchase).

This limited warranty covers defects in materials and workmanship in this product.

What is not covered

This limited warranty does not cover any damage, deterioration or malfunction resulting from failure to correctly install or set the product, any alteration, modification, improper or unreasonable use or maintenance, misuse, abuse, accident, neglect, exposure to excess moisture, fire, power surges, or other acts of nature. This limited warranty does not cover any damage, deterioration or malfunction resulting from the installation or removal of this product, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Bargain Blinds to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product. This limited warranty does not cover any third-party equipment enclosures, cables or accessories used in conjunction with this product.

Without limiting any other exclusion herein, Bargain Blinds does not warrant that the product covered hereby, including, without limitation, the technology and/or integrated circuit(s) included in the product, will not become obsolete or that such items are or will remain compatible with any other product or technology with which the product may be used.

Who is covered

Only the original purchaser of this product is covered under this limited warranty. This limited warranty is not transferable to subsequent purchasers or owners of this product.

What Bargain Blinds will do

Bargain Blinds will, at its sole option, provide one of the following three remedies to whatever extent it shall deem necessary to satisfy a proper claim under this limited warranty:

1. Elect to repair or facilitate the repair of any defective parts within a reasonable period of time, free of any charge for the necessary parts and labour to complete the repair and restore this product to its proper operating condition. Bargain Blinds will also pay the shipping costs necessary to return this product once the repair is complete.
2. Replace this product with a direct replacement or with a similar product deemed by Bargain Blinds to perform substantially the same function as the original product.
3. Issue a refund of the original purchase price less depreciation to be determined based on the age of the product at the time remedy is sought under this limited warranty.

What Bargain Blinds will not do under this limited warranty

If this product is returned to Bargain Blinds the shipping charges are to be prepaid by you. Bargain Blinds will not be responsible for any costs related to the removal or re-installation of this product. Bargain Blinds will not be responsible for any costs related to any setting up of this product, any adjustment of user controls or any programming required for a specific installation of this product.

How to obtain a remedy under this limited warranty

To obtain a remedy under this limited warranty, you must contact the authorised Bargain Blinds reseller from whom you purchased this product. In order to pursue any remedy under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorised Bargain Blinds reseller. You may also be directed to an authorised reseller or a person authorised by Bargain Blinds to repair the product. If it is decided that this product should be returned directly to Bargain Blinds or an authorised reseller for inspection or repair, this product should be properly packed for shipping, and all shipping and insurance costs shall be prepaid by you as detailed above under What Bargain Blinds Will Not Do Under This Limited Warranty. Before any action or remedy is undertaken, inspection of product may be required to determine if the product is indeed faulty, and if found faulty, whether the faults found are covered by this limited warranty.

Limitation of liability

THE MAXIMUM LIABILITY OF Bargain Blinds UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, Bargain Blinds IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY. Some countries do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages. Or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

Exclusive remedy

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED.

Other conditions

This limited warranty is void if (i) the label bearing the serial number of this product has been removed or defaced, (ii) the product is not distributed by Bargain Blinds or (iii) this product is not purchased from an authorized Bargain Blinds reseller.

Bargain Blinds thanks you for purchasing a Bargain Blinds product. We hope it will give you years of satisfaction.